



Partslist FX Typhoon

Location	Article number	Description	Location	Article number	Description
1 Lo	11030 < 16 Joule	Spring Adjuster	44	2508	Screw M5x8
1 Hi	11541 > 16 Joule	Spring Adjuster	45	5104	O-ring 9,3 x 2,4
2	16024	Spring	46	16028	O-ring 12 x 1
3	16007	Bolt attachment	47	11624	O-ring 22 x 2,5 NBR7
4	16005	Probe and hammer aligner	48	16009	Main Valve Tube End
5 - 4,5	16006	Pellet probe 4,5	49	16017	Air tube 390
5 - 5,5	16008	Pellet probe 5,5	50		Stock
6	16025	Spring Return			
7	11023	Hammer			
8 - 4,5	16032	Barrel Housing 4,5			
8 - 5,5	16010	Barrel Housing 5,5			
9		Screw M3x20			
10	2637	Screw M4x6			
11	2637	Screw M4x6			
12 - 4,5	2057	Barrel Brass Inlet 4,5			
12 - 5,5	2056	Barrel Brass Inlet 5,5			
13	5112	O-ring 5,28 x 1,78 NBR70			
14	5112	O-ring 5,28 x 1,78 NBR70			
15	2529	O-ring 4,3 x 1,5 NBR70			
16	2023	Valve Seat			
17	2528	O-ring 1,5 x 1,0 NBR70			
18	2040	Valve Seal			
19	2041	Valve Seal Holder			
20	2022	Valve pin			
21	16030	Valve Spring			
22	16002	Valve spring lid			
23 - 4,5	12030	Barrel 4,5			
23 - 5,5	12006	Barrel 5,5			
24	11017	Air tube end Inlet Nut			
25	2524	Spring 0,5 x 3 x 20			
26	12011	Inlet valve			
27	5111	O-ring 2,5 x 1,5 NBR90			
28	11624	O-ring 22 x 2,5 NBR70			
29	11029	Air cylinder end			
30	16004	Cocking Bolt			
31	16003	Alignment pin			
32 Lo	16026 < 16 Joule	Steel Washer			
32 Hi	11540 > 16 Joule	Hammer weight			
33	16023	Steel pin 2x16			
34	11031	Trigger Sear			
35	11504	Spring 1-stage			
36	11524	Trigger base			
37	11015	Trigger adjuster 2-stage			
38	2500	Screw M3x6			
39	2020	Trigger			
40	2527	Screw M3x10			
41	2500	Screw M3x6			
42	11525	Trigger wheel			
43		Stock Screw			

Partslist FX T12

Location	Article number	Description	Location	Article number	Description
1 Lo	11031 < 16 Joule	Spring Adjuster	44	2508	Screw M5x8
1 Hi	11541 > 16 Joule	Spring Adjuster	45	5104	O-ring 9,3 x 2,4
2	16024	Spring	46	16028	O-ring 12 x 1
3	16007	Bolt attachment	47	11624	O-ring 22 x 2,5 NBR7
4	16005	Probe and hammer aligner	48	16009	Main Valve Tube End
5 - 4,5 Lo	16006-2 < 16 Joule	Pellet probe 4,5 Steel	49	16017	Air tube 390
5 - 4,5 Hi	16006-1 > 16 Joule	Pellet probe 4,5 Brass	50		Stock
5 - 5,5	16008-1	Pellet probe 5,5 Steel			
6	16025	Spring Return			
7	11023	Hammer			
8 - 4,5	16022	Barrel Housing 4,5			
8 - 5,5	16015	Barrel Housing 5,5			
9		Screw M3x20			
10	2637	Screw M4x6			
11	2637	Screw M4x6			
12 - 4,5	2057	Barrel Brass Inlet 4,5			
12 - 5,5	2056	Barrel Brass Inlet 5,5			
13	5112	O-ring 5,28 x 1,78 NBR70			
14	5112	O-ring 5,28 x 1,78 NBR70			
15	2529	O-ring 4,3 x 1,5 NBR70			
16	2023	Valve Seat			
17	2528	O-ring 1,5 x 1,0 NBR70			
18	2040	Valve Seal			
19	2041	Valve Seal Holder			
20	2022	Valve pin			
21	16030	Valve Spring			
22	16002	Valve spring lid			
23 - 4,5	12030	Barrel 4,5			
23 - 5,5	12006	Barrel 5,5			
24	11017	Air tube end Inlet Nut			
25	2524	Spring 0,5 x 3 x 20			
26	12011	Inlet Valve			
27	5111	O-ring 2,5 x 1,5 NBR90			
28	11624	O-ring 22 x 2,5 NBR70			
29	11029	Air cylinder end			
30	16004	Cocking Bolt			
31	16003	Alignment pin			
32 Lo	16026 < 16 Joule	Steel Washer			
32 Hi	11540 > 16 Joule	Hammer weight			
33	16023	Steel pin 2x16			
34	11031	Trigger Sear			
35	11504	Spring 1-stage			
36	11524	Trigger base			
37	11015	Trigger adjuster 2-stage			
38	2500	Screw M3x6			
39	2020	Trigger			
40	2527	Screw M3x10			
41	2500	Screw M3x6			
42	11525	Trigger wheel			
43		Stock Screw			